

# FINGER PICK USER GUIDE

Version 1.1



# **Table of Contents**

FEATURES OF FINGER PICK	. 2
CHARGING AND BATTERY	. 2
POWER ON AND OFF	. 2
PAIRING MODE	. 2
ANDROID APPLICATION DOWNLOAD	. 3
MANUAL PAIRING	. 3
NFC PAIRING	
WIDGET	. 4
UNPAIR	. 5
IMPORTANT NOTE	. 5
LED STATES	. 5
	CHARGING AND BATTERY  POWER ON AND OFF  PAIRING MODE  ANDROID APPLICATION DOWNLOAD  MANUAL PAIRING  NFC PAIRING  WIDGET  UNPAIR  IMPORTANT NOTE



#### 1. FEATURES OF FINGER PICK







#### 2. CHARGING AND BATTERY

Charging of the Bluetooth Finger Pick is done via the Type-C USB connector. Use a standard USB connection or charger supporting: 5V - 1A.

During charging, the LED shows a solid Red color. When the battery is fully charged, the LED either turns off.

If during operation the battery level goes low the LED show a solid Red color to indicate the battery need to be recharged.

The charging time is approximately 30 minutes.

With a fully charged battery, the expected operational time is above 3 months.

#### 3. POWER ON AND OFF

To power ON the Finger Pick you have to press and hold the POWER button for 2 seconds. When powered ON Blue LED flash twice.

To turn OFF the device you have to press and hold the power button for 2 seconds until the BLUE LED solid ON, then release power button

#### 4. PAIRING MODE

When powered ON, Finger Pick goes in Pairing Mode for 120 seconds, the Blue LED flashes quickly twice (every 2 seconds).

After Pairing Mode is timeout, Finger Pick goes power off.

If you want to go back to pairing mode, you need to power on the device again.

When the Finger Pick is in pairing mode, you can pair it with your device using NFC mode or manually using the dedicated Android application



#### 5. ANDROID APPLICATION DOWNLOAD

5.1. Install the application from Google Play Store (recommended for automatic updates). Search "Finger Pick Lexter" on the Play Store from your device or scan the QR code below to install without the Play Store.





Alternatively use the URL below or scan the QR code below

www.fingerpickwearable.com/download/fingerpick.apk


5.2. Open the installed application. The name of the app is "Finger Pick".



5.3. Allow app to access device's location

### 6. MANUAL PAIRING

6.1. Tap on Bluetooth trigger configuration

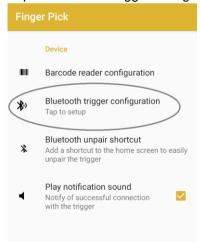


- 6.2. Allow app to turn on the bluetooth (This point only if bluetooth is not enabled)
- 6.3. Select your Finger Pick from devices list (you see the MAC ADDRESS)






# 7. NFC PAIRING

Place the Finger Pick's NFC tag near the device's NFC antenna (usually on the back). As confirmation of the association you will see a confirmation window and an audible signal.

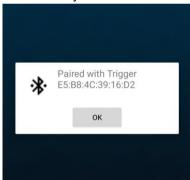

# 8. WIDGET

You can add the widget on the home screen to unpair the button easily. Open the app and tap to "Bluetooth unpair shortcut" for add the widget.

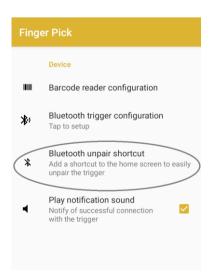



# 9. UNPAIR

it is recommended to use the widget as described above. If necessary, you can also unpair by opening the app  $\rightarrow$  Bluetooth trigger configuration  $\rightarrow$  Unpair trigger





#### 10. IMPORTANT NOTE

If a finger pick is connected to a device, you must first unpair it in order to connect it to another device. It is therefore recommended to use the widget to unpair the device at the end of the work.

#### 11. LED STATES

EVENTS	EVENTS
Power ON	Blue LED double flash
Power OFF	Blue LED solid ON until the power button is released

LED	FUNCTION
Turned off	The device is turned off or the battery charging is complete.
Blue single flash (every 3 seconds)	Finger Pick connected to device
Blue fast double flash(every 2 seconds)	Pairing Mode
Red solid	Battery charging or battery low